


# TAMAGOTCHI MUSIC STAR



If you have one of these designs, you might have a confused Tamagotchi! Some Tamas were so excited to become Music Stars that they got their calendars all mixed up!

In order to enter the Date and Birthday on these confused Tamas, you'll need to enter the DAY OF THE MONTH first and then the MONTH! For example, if you got this Tamagotchi for Christmas and happen to be setting it up on Christmas day, you would first enter 25 and then 12, instead of 12 and then 25!

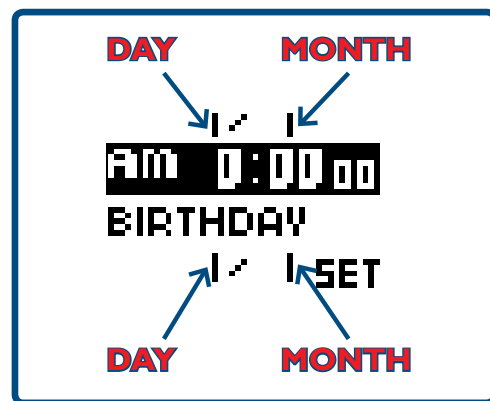

To check if your Tama got its dates mixed up, try selecting 13 in the first blinking space. If you can get up to 13, your Tama will need to have the day entered first and then the month for both DATE and BIRTHDAY.

Please note that their date display will also be backwards, and will read 25/12 instead of 12/25!

